

Instructions and Warnings

Please carefully read the instructions and warnings below for the installation, cleaning and maintenance of your HRV Ventilation system.

- 1. Installation of HRV must be carried out by an Authorised HRV Installer.
- Repairs and Maintenance must be carried out by Authorised HRV personnel.
- 3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 4. Children should be supervised to ensure that they do not play with the appliance.
- 5. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 6. Ensure that the fan is switched off from the supply mains before removing the guard.

For any questions or comments please contact us

0800 HRV 123 or www.hrv.co.nz

